


HOMMAGE À ARETHA FRANKLIN

# SOUL SERENADE

**PLAN DE SCÈNE ET FICHE TECHNIQUE**

<i>Michel Bonnet</i> maikeul.bonnet@gmail.com +33 6 28 33 16 55	<i>Michel Sénamaud</i> msenamaud@wanadoo.fr +33 6 07 13 03 61
---	---

**RÉFÉRENCE DE CLAVIERS DANS L'ORDRE DE PRÉFÉRENCE:**  
Nord Stage 88  
Roland RD700 ou RD800  
Korg SV1 88

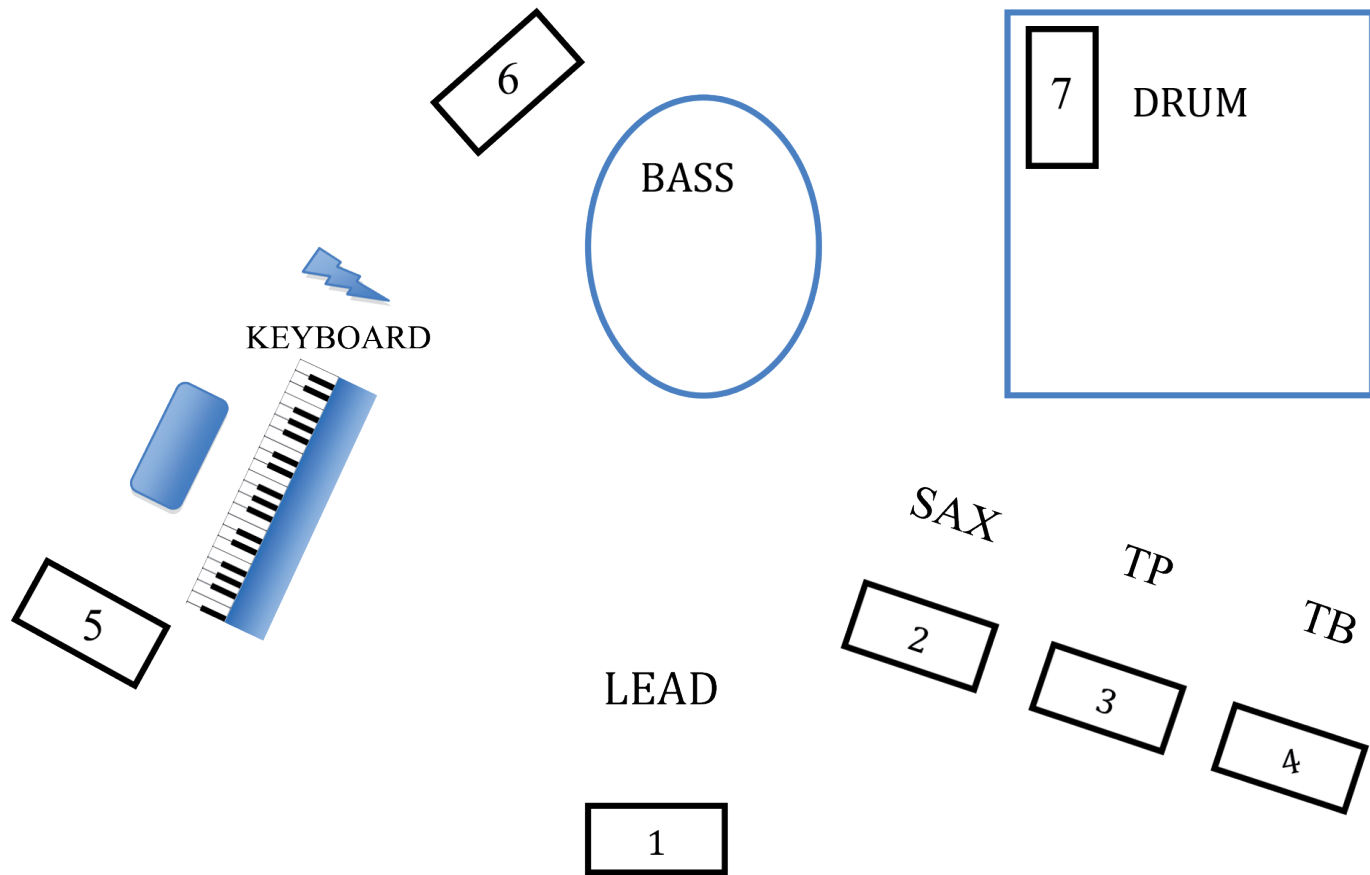

# SOUL SERENADE

## PATCH IN

## PATCH OUT

Channel	instrument	micro	ped	Channel	désignation		
1	KICK	BETA 52	PP	AUX 1	RETOUR LEAD	PRE FADER	
2	SNARE	SM57	PP	AUX 2	RETOUR SAX	PRE FADER	
3	HH	KM 184	GP	AUX 3	RETOUR TP	PRE FADER	
4	OH J	KM 184	GP	AUX 4	RETOUR TB	PRE FADER	
5	OH C	KM 184	GP	AUX 5	RETOUR KEYBOARD	PRE FADER	
6	BASS DI	DI type RADIAL J48		AUX 6	RETOUR BASS	PRE FADER	
7	BASS MIC	ATM 350 (FOURNI)	PINCE	AUX 7	RETOUR DRUM	PRE FADER	
8	KEYBOARD L	DI Active		AUX 8	REV HALL	POST FADER	
9	KEYBOARD R	DI Active		AUX 9	REV ROOM	POST FADER	
10	SAX	HF FOURNI		AUX 10	REV PLATE	POST FADER	
11	TP	HF FOURNI		AUX 11	DELAY	POST FADER	
12	TB	HF FOURNI		12			
13	LEAD VOCAL	KMS 105 (FOURNI)	GP	13			
14	SPARE VOCAL	KMS 105 ou SM58	GP	14			
15	CD L			15			
16	CD R			16			
17	REV HALL L			17			
18	REV HALL R			18			
19	REV ROOM L			19			
20	REV ROOM R			20			
21	REV PLATE L			21			
22	REV PLATE R			22			
23	DELAY L			23			
24	DELAY R			24			